

 
Merlin®

TRANSMITTERS & WIRELESS WALL CONTROL MODELS E940M , E943M, E945M, E950M, E128M & E138M

For use with Security+ 2.0 Garage Door Openers. The code between the remote control and the receiver changes with each use, randomly accessing over a billion new codes. Refer to your product manual for the location of the learn button.

NOTE: Your product may look different than the products illustrated in this manual.

Single Button Remote Control
Model E940M




3-Button Mini Remote Control
Model E945M



3-Button Remote Control
Model E943M




 
4-Button Remote Control
Model E950M

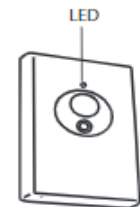

Wireless Wall Control
Model E128M



  
Wireless Wall Control
Model E138M

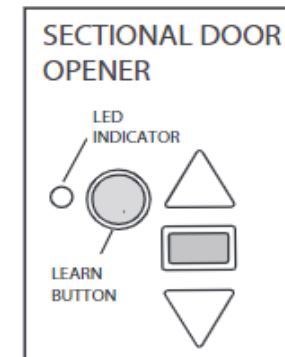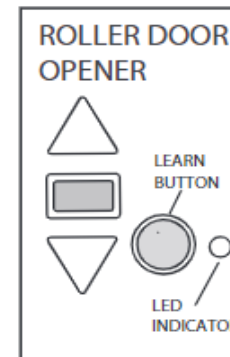

⚠ WARNING

To prevent possible **SERIOUS INJURY** or **DEATH** from a moving gate or garage door:

 - ALWAYS keep remote controls out of reach of children. NEVER permit children to operate, or play with remote controls.
- Activate gate or door **ONLY** when it can be seen clearly, is properly adjusted, and there are no obstructions to door travel.
- ALWAYS keep gate or garage door in sight until completely closed. NEVER permit anyone to cross path of moving gate or door.

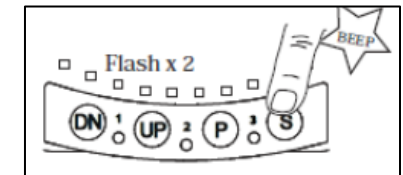

PROGRAM USING THE GARAGE DOOR OPENER

- 1 Locate the learn button.
- 2 Press and hold the button on the remote control or wireless wall control you wish to use. The LED indicator on the transmitter flashes continuously (except E945M).
- 3 Press and immediately release the Learn button.
- 4 "click" "click" The opener light flashes or 2 clicks are heard when it has learnt the code.

TO ERASE ALL CODES FROM MEMORY

When deactivating any unwanted remote control code, all previous codes will be erased.

- 1 Press and hold the Learn button on garage door opener until the learn LED goes out (approximately 6 seconds). All previous codes are now erased. Reprogram each remote control you wish to use.